


BLÅKLÄDER®

OPERATING MANUAL



Art. no. 2816

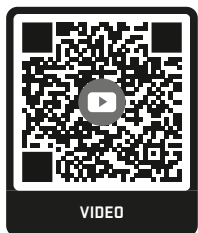

VIDEO

QUICK START GUIDE

WHAT'S IN THE BOX



Gloves with Clim8® technology inside



2 x Clim8® rechargeable Li-ion batteries



USB-C charging cable

- ① For products supplied with a Clim8® USB-C charging cable, a USB-C Power Delivery adapter (delivering min. 30W per port) is required (not included).

FIRST USE

1. CHARGE BATTERIES TO 100%

The battery must be fully charged prior to first use. The charger indicator turns green when the battery is fully charged. The indicator is red during charging.



2. CONNECT BATTERIES TO GLOVES

The Clim8® module LED lights up for a second, then goes out.

3. INSERT YOUR HANDS

You're ready to go! The Clim8® technology detects your hands and automatically starts regulating the heat based on your selected mode.

- ② The Clim8® regulation will automatically turn the heating on and off to maintain your desired comfort temperature.


HEATING MODES

Simply press the Clim8® module once to switch from one heating mode to another. Each mode automatically regulates heating to a specific level:



HEATING MODE	HEAT LEVEL	LED COLOR
Stand by	None	Off
ECO	Low	Blue
COMFORT	Medium	Purple
BOOST	High	Red

AUTO-DETECTION

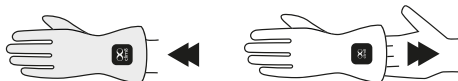

HAND IN

Clim8® turns on and regulates heating automatically.

HAND OUT

Clim8® goes to Sleep mode, consuming almost no battery power.

- ① To prevent accidental activation (like when the product is folded in a backpack), turn off the Clim8® technology by disconnecting the battery.

MANUAL MODE

You can manually turn on and off your gloves by pressing the Clim8® module for 2 seconds.

- ① Manually turning on the gloves disables auto-detection. You must switch them off manually, or they will enter Sleep mode after a period of inactivity.

CLEANING

- ⚠ **CAUTION!** Most gloves with Clim8® technology inside are NOT machine-washable. Please always follow the products washing instructions.

- ⚠ **Batteries should never be immersed.**

STORAGE

When not in use, store as follows.

When storing the gloves, allow them to cool down before folding. Do not crease the gloves by placing items on top of it during storage.

For long-term storage, disconnect the battery from the product. Please keep the product in a dry place.

- ① To prolong battery life, we recommend charging the battery at least every 3-6 months.

BATTERY LEVEL

Double click the Clim8® module to check the battery level:



Flashing: <1%



<30%



30% to 60%



>60%

WARRANTY

Clim8® technology is a component technology and not the final product. All product warranty claims will go through the original place of purchase and Blåkläder.

Blåkläder offers a warranty of:

- Two (2) years from the date of purchase in Europe/UK, in accordance with applicable European Union legislation and Consumer Rights Act 2015, UK.

Within the warranty period, Blåkläder will repair or replace the product free of charge to remedy any material or manufacturing defects.

This warranty does not cover any damage resulting from improper use, personal negligence, normal wear (e.g. in the case of textiles) as well as defects that are only slightly detrimental to the value or usability of the product. The original purchase receipt is required to process the warranty.

All warranty claims will be void if:

- Interventions by unauthorized parties are made
- Parts other than original spare parts are used

The warranty granted by Blåkläder neither restricts the legal rights of the customer according to the respective applicable national law, nor the rights of the customer towards the retailer from the purchase agreement made between them.

For any repair or replacement service, please contact your dealer or distributor in the first instance, who is responsible for processing guarantee claims.

TROUBLESHOOTING

Batteries are not charging: If the LED on the Clim8® USB-C charging cable turns green right after you plug in the batteries, it means your power adapter is not compatible (see *First Use section*).

Module LED flashes red rapidly: Please try to disconnect and reconnect the battery. If the problem persists, please contact your place of purchase.

CONTACT CLIM8

➡ Online at <https://support.myclim8.com/>

✉ By e-mail at support@myclim8.com

SAFETY WARNINGS AND INSTRUCTIONS



Read operator's manual



Do not insert pins



Not suitable for children under the age of 36 months

Important instruction. Retain for future use. Please read the operating instructions carefully.

WARNING: For the purposes of recharging the battery, only use the detachable supply unit provided with this product.

- This product must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.
- Please consult your doctor before using the product if you have problems sensing hot or cold objects (e.g., diabetics, disabled persons, Raynaud's, etc.).
- People with a heart pacemaker, metal implants or insulin pump should first consult with their doctor before using the product.
- The product can be used by children older than 3 years and younger than 8 years under supervision and recommendation to set the control to minimum temperature value.
- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children shall not play with the product. Cleaning and user maintenance shall not be made by children without supervision.
- Not intended to be used to warm animals.
- Excessive heat levels over prolonged periods can lead to burns.
- Only use the supplied charger to charge the device. It is designed for indoor use and must not be exposed to humidity.
- Do not wear the product during the charging process.
- Do not insert any metal or other objects into sockets or plugs because this can damage the product.
- If the charging cables or any other parts of the product are damaged, discontinue the use of the product.
- Do not modify the product or divert it from its intended use.
- This product is not intended for medical use in hospitals.
- Never use if inner liner is wet.
- It is not recommended to use the product with an avalanche transceiver.
- The product must only be operated with the supplied battery.
- Do not sleep with your product while it is still switched on.
- Check the product regularly for signs of wear or damage. If you notice any of these signs, if the product was used improperly or if the product does not work, bring it back to the dealer before using it again.
- Cables and electrical cords may cause entanglement and related risks.

TECHNICAL SPECIFICATIONS

BATTERIES

WARNING - Risk of fire.

Never try to open the battery pack yourself. Improper handling of the lithium-ion batteries can lead to an explosion. Moreover, the electronics of the heated garment can be damaged.

The product is not suited for being used in locations where special conditions prevail, such as the presence of a corrosive or explosive atmosphere (dust, vapor or gas).

To reduce the risk of fire or burns, do not open, do not disassemble, do not crush, do not puncture, do not dispose in fire or water the battery, do not short external contacts.

Damaged batteries must not be used and must be disposed of properly.

If you notice a battery is leaking, stop using the device immediately, unplug it and move it away from flammable materials. Continuing to use the device can increase the risk of damage or injury. Avoid direct contact with the battery or leaked material. Place the battery in a non-flammable, sealed container (e.g., a metal box with sand) and take it to a designated hazardous waste facility or recycling center.

Using non-rechargeable batteries in devices designed for rechargeable batteries can result in serious safety hazards. Inserting non-rechargeable batteries can also damage your device, void the warranty, and pose risks to personal safety.

Model*	LIP-805060-2S	LIP-654060-2S
Nominal voltage	7.4V	7.4V
Nominal capacity	3000 mA	2000 mA
Output wattage	22.2 W	14.8 W
Charging time	Around 2h45	Around 1h40
Charging time (2 batteries at the same time)	Around 4h30	Around 3h00

* Depending on your product. All products can be used with either battery.

REGULATORY STATEMENTS



DISPOSAL OF ELECTRICAL & ELECTRONIC EQUIPMENT (WEEE DIRECTIVE)

This product may not be treated as regular household waste. Management of WEEE (Waste Electrical and Electronic Equipment) is applicable in member states of the European Union and other European countries with individual national policies on the management of WEEE. If you need more information on collection, reuse and recycling systems, please contact your local or regional waste administration facility.

Always dispose of your battery according to international, federal, state and local regulations. Contact a recycling agency in your area for recycling locations. Even discharged batteries contain some energy. Before disposing, use electrical tape to cover the terminals to prevent the battery from shorting, which could cause a fire or explosion.

CE EU – DECLARATION OF CONFORMITY

This product complies with the relevant EU regulations and guidelines.

Heating pad, batteries, chargers and electronic systems are made in China.

Contact information:

AB Blåkläder
Box 124
512 23 Svenljunga
Sweden
Telephone; +46 (0) 325 66 19 00
Email; info@blaklader.com

UK Contact:

Blaklader Workwear LTD
3A Pavilion Court.
600 Pavilion Drive Brackmills
NN4 7SL Northampton
United Kingdom
Telephone; +44(0) 1604 437 045
Email; uksales@blaklader.com
www.blaklader.com

WARNING

Blåkläder and Clim8 are not responsible for the consequences – whether direct, indirect or accidental – or any other type of damage arising or resulting from the use of the products.

You are responsible for your actions and activities, and for any consequences that may result from them.

Clim8® is a registered trademark of Clim8 SAS.

https://myclim8.com/
hello@myclim8.com

Contact information:

AB Blåkläder

Address:

AB Blåkläder, Box 124, 512 23 Svenljunga, Sweden

Telephone; +46 (0) 325 66 19 00, Email; info@blaklader.com

UK Contact:

Blaklader Workwear LTD, 3A Pavilion Court., 600 Pavilion Drive Brackmills, NN4 7SL Northampton, United Kingdom

Telephone; +44(0) 1604 437 045, Email; uksales@blaklader.com

www.blaklader.com

